


# Parts Diagram

## Intellect Wave® Classroom Furniture 4-Leg Music Chair with or without Book Rack

January 2023

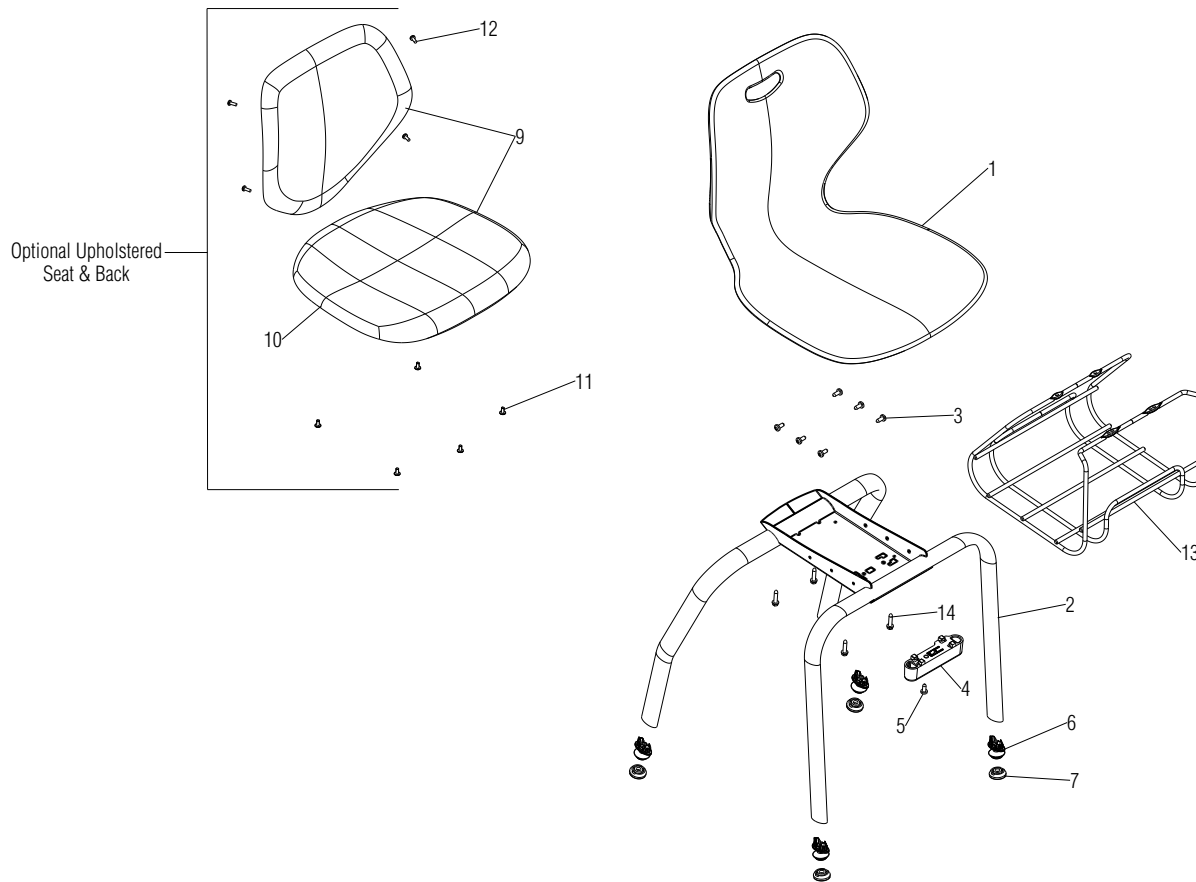

.XX = Select Color

Items 2 replacement frames do not come with glides. Glides must be ordered separately.

Item 6 felt glide (used after 2011), uses caps that are replaced when worn. Use item 7, felt cap to replace.

Item 8 glide cap removal tool (not shown) is used to remove old glide caps for replacement on felt glides. See KI-RR-000030 for instructions.

Items 13 and 14 only available on 19" frame.

Item	Part Number	Item Description	Req Qty	Item	Part Number	Item Description	Req Qty
1	46.9104.XXX	Shell, 19" Large Chair	1	6	46.9147.X	Glide, Steel 4-Leg	4
	46.9104.XX.U	Shell, 19" Large Upholstered Chair	1		46.8204.X	Glide, Nylon 4-Leg	4
	46.9105.XXX	Shell, 16.5" Medium Chair	1		46.8105.X	Glide, Felt Solo 4-Leg (see note)	4
2	46.9280.XX.X	Weldment, 19" 4-Leg Music Chair Frame (see note)	1	7	10.0129.X	Cap, Felt Glide (see note)	4
	46.9285.XX.X	Weldment, 16.5" 4-Leg Music Chair Frame (see note)	1	8	10.0138.X	Removal Tool, Felt Glide Cap (not shown) (see note)	1
3	12.0074.P.X	Screw, 1/4-20 x 5/8 6-LO PAN	6	9	IWRC	Seat & Back, Upholstered	1
4	46.9141.X	Bumper, Stacking Front	1	10	IWRC	Seat, Upholstered	1
5	12.0561.X	Screw, #10-24 x 1-1/4" 6 LOBE PH	1	11	12.0121.X	Screw, #10-24 x 7/16" PTH M/S	5
				12	12.0110.XX.X	Screw, #10-24 x 1/2" PTH	4
				13	46.9215.CH.X	Weldment, Book Rack	1
				14	12.9004.X	Screw, 1/4-14 x 1" Hex Washer Head	4

