


Operating Instructions ■

Intellect® Wave Task Chair with Tilt Mechanism

March 2011

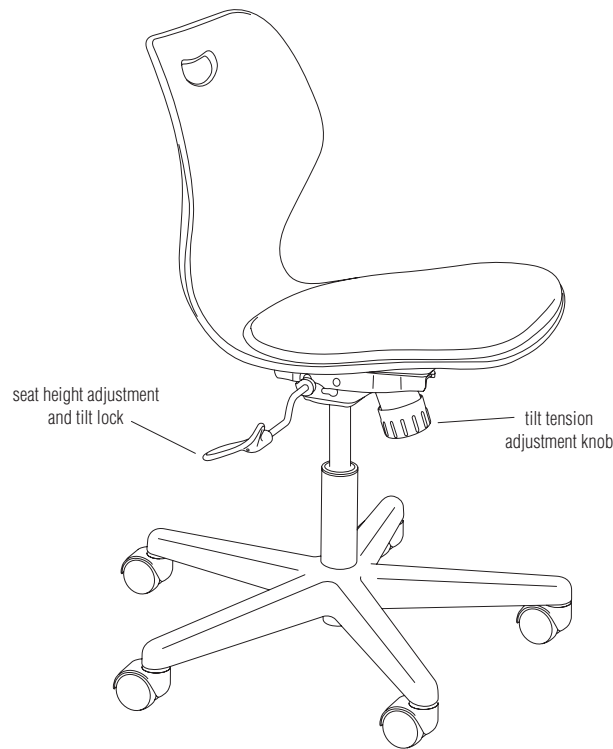

To benefit from the Intellect Wave chair's ergonomic features, individual adjustments need to be made. See Figure 1.

Seat Height

Seat height is adjusted with a pneumatic cylinder. To lower height while seated, lift the lever at the right front of the seat. To raise the height, remove your weight from the seat while lifting the lever.

Seat Tilt Mechanism Tension

To adjust the tension of the tilt mechanism, turn the knob underneath the front of the seat. Turn it clockwise to tighten tension and counterclockwise to loosen the tension.

Seat Tilt Lock/Unlock

To lock the tilt, push the seat height adjustment lever in (towards the chair). To unlock the tilt, pull out the seat height adjustment lever (away from the chair).