


Parts Diagram ■

Strive® Seating
Comfort Tilt Task Armchair

September 2020

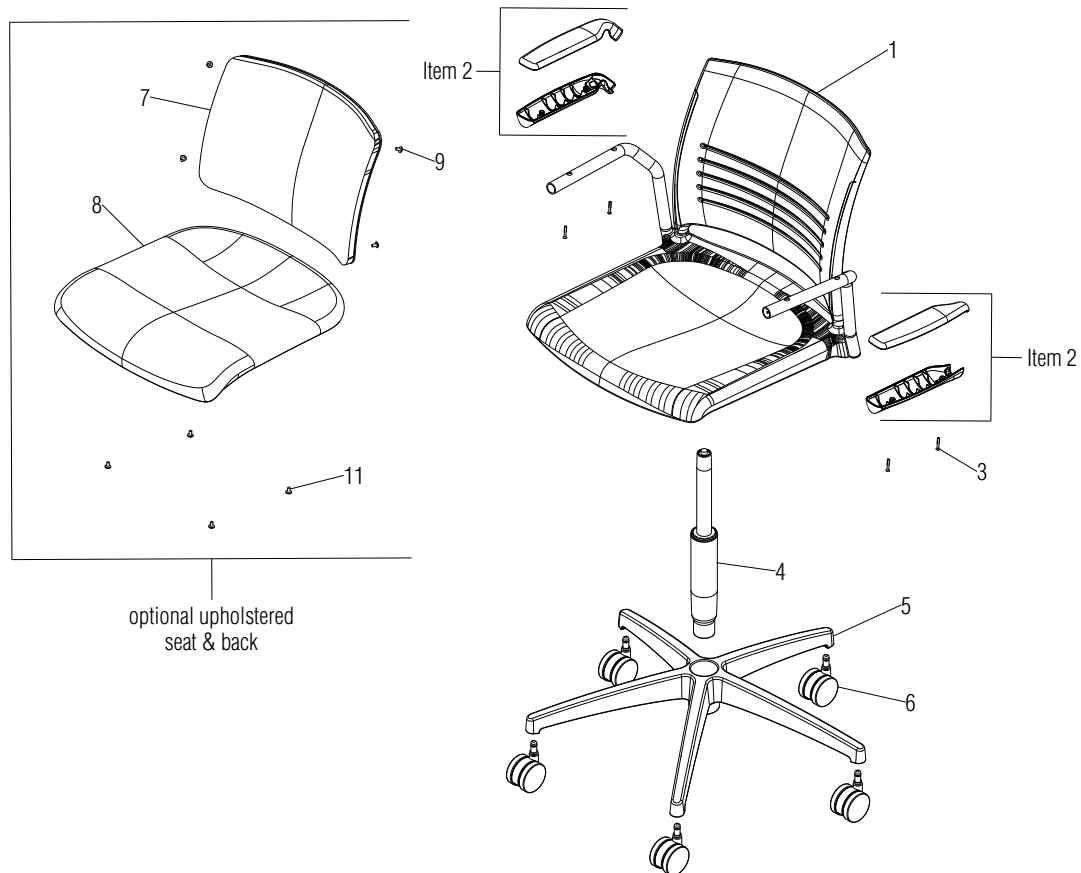

.XX = Select Color

Item 1 is a replacement Seat & Back (includes items 2 & 3).

Item	Part Number	Item Description	Req Qty	Item	Part Number	Item Description	Req Qty
1	SMTP	Replacement Comfort Tilt Seat & Back, Poly Armchair	1	5	SIFT.015.X	Aluminum Base, Strive Task Chair	1
	SMTU	Replacement Comfort Tilt Seat & Back, Upholstered Seat Armchair	1		46.2995.XX.X	Base, 5 Blade Cylinder	1
	SMTUB	Replacement Comfort Tilt Seat & Back, Upholstered Seat & Back Armchair	1	6	09.0440.XX.X	Caster, 60mm Diameter Carpet	5
2	STV.CA.XX.X	Arm Cap Set, Right & Left Hand	1		09.0441.BL.X	Caster, 60mm Diameter Hard Floor	5
3	13.6022.X	Screw, #8 x 7/8" PH OVL HD T-AB T/SCZ	4	7	STRBC	Assembly, Upholstered Backrest Cushion	1
4	15.1078.D.X	Cylinder, Pneumatic Height Adjustment, Aluminum Base	1	8	STRRC	Assembly, Upholstered Seat Cushion	1
	15.1084.D.X	Cylinder, Pneumatic Height Adjustment, Plastic Base	1	9	12.0055.CZ.X	Screw, #10-16 x 1/2" Type AB T/F BLK ZC	4
				10	12.0111.XX.X	Screw, #10-24 x 3/8" PTH M/S ZC w/ PATCH	4

