

Assembly Instructions ■

Concerto® Auditorium Seating

ADA Removable Base

March 2025

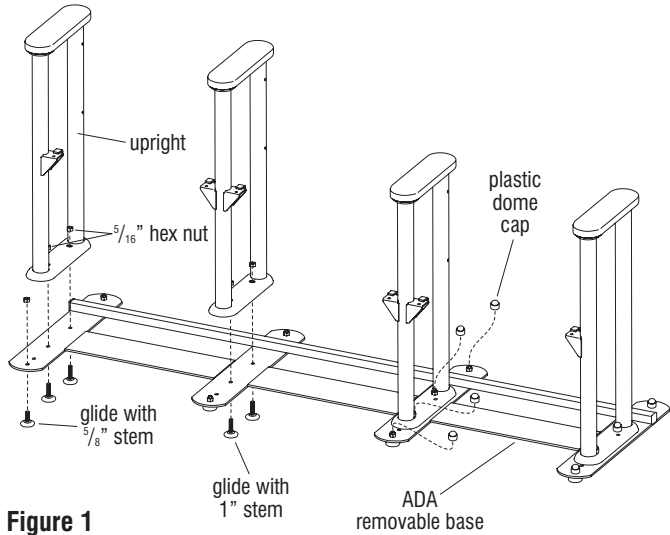


Figure 1

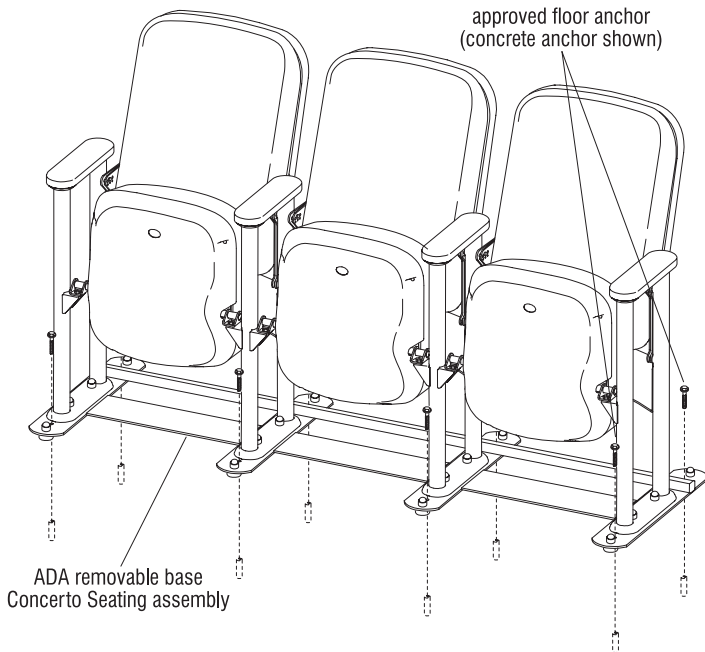


Figure 2

Note: ADA Removable Bases are not available with power & USB or power & data. The instructions below detail the installation of the uprights to the ADA removable base using the glides, nuts and caps provided. They will refer to sections of the Concerto Seating with Power & USB (KI-AI-000029) or with Power & Data (KI-60323) Assembly Instructions for completion. It is important to follow them during assembly.

1. Locate the glides that attach below the base strips. Glides with $\frac{5}{16}$ " long stems must be installed at the end of the foot, while the glides with 1" long stems install in the middle of the base strips. Insert the appropriate glides up through the ADA base and the mounting holes in the foot of each upright. Secure the components together with $\frac{5}{16}$ " hex nuts on the glides (Figure 1).
2. Place a plastic dome cap on top of each glide stem, above the installed $\frac{5}{16}$ " hex nut (Figure 1).

3. If the Concerto Auditorium Seating contains power & USB, proceed to Concerto Auditorium Seating with Power & USB Assembly Instructions (KI-AI-000029) and refer to pages 9 and 14. Follow instructions for "Back Attachment" and "Seat Attachment" as described. If equipped with accessories like tablet arms or end panels, refer to page 12 or 15. If the seating contains power & data, proceed to Concerto Auditorium Seating with Power & Data Assembly Instructions (KI-60323) and refer to pages 9 and 15 of the Concerto Seating Assembly Instructions. Follow instructions for "Back Attachment" and "Seat Attachment" as described. If equipped with accessories like tablet arms or end panels, refer to page 13 or 16.
4. Place the assembled ADA removable base/Concerto Seating assembly in the desired location for mounting to the floor. Mark the location of the mounting holes on the floor and move the unit out of the way for drilling.
5. Bore anchor holes to required hole depth for floor-type specific floor anchors. See pages 2 through 5 of either Concerto Assembly Instructions for anchor information.
6. Reposition the unit and secure to the floor following the anchor requirements (Figure 2).
7. For removal of the unit, remove the hardware that anchors the ADA base to the floor and move the unit. To reinstall, repeat steps 5 & 6 (Figure 2).

Note: Take great care when removing and installing the unit. Damage to the anchoring hardware may result in expensive repairs to the floor and anchoring hardware.

Caution: Unit must be properly fastened to the floor. Failure to properly fasten unit to the floor may result in instability of the unit and personal injury.



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.