


Assembly Instructions ■

Intellect Wave® Task Stool Assembly

June 2008

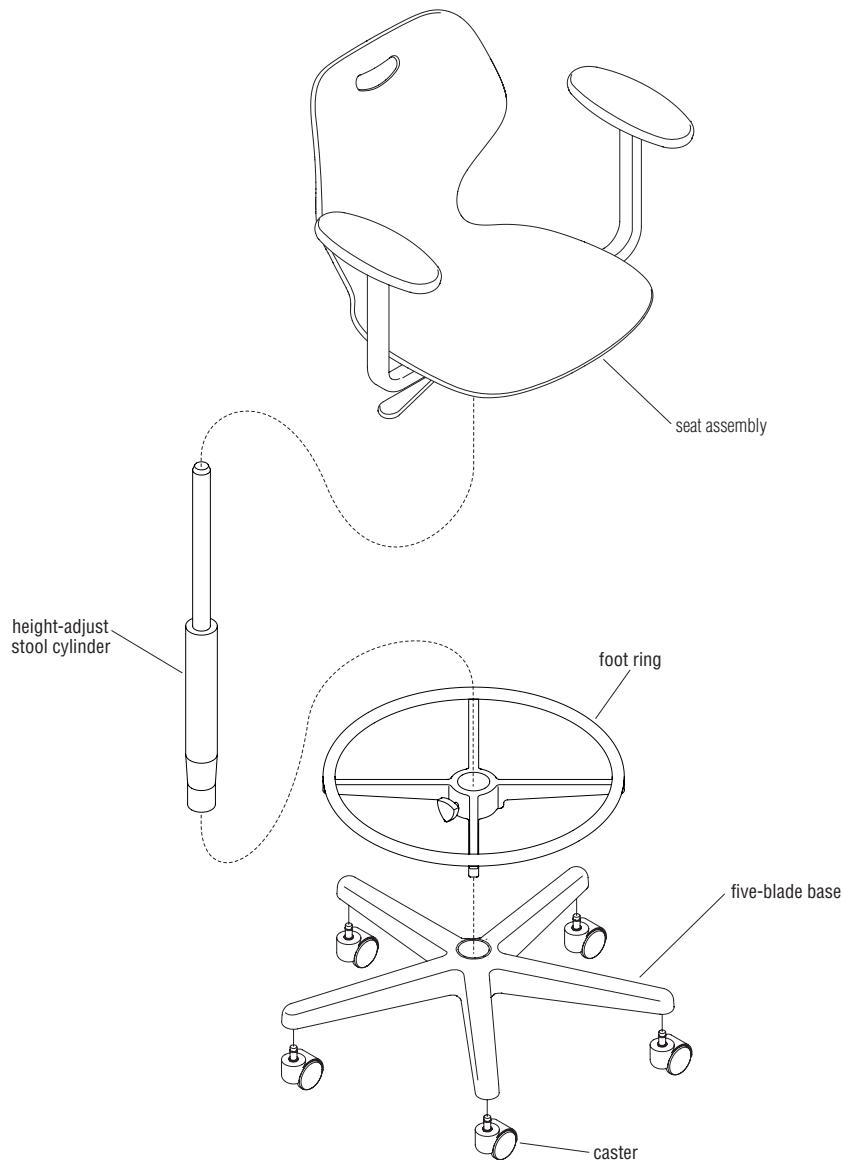

1. With the five-blade base upside-down on a soft protective surface, place the stem of the caster (one at a time) into a mounting hole in the base. Using the spherical-end of a ball-peen hammer, tap the caster between the wheel, and in-line with the metal stem, to drive the caster securely into the base. Repeat with remaining casters and carefully set the base onto the floor.
2. Press the larger end of the height-adjust stool cylinder into the center hole of the five-blade base.
3. Loosen the hand knob on the footring, then insert the footring onto the height-adjust stool cylinder. Press the footring down to desired location and tighten the hand knob to secure in position.
4. Align the hole in the bottom of the seat assembly with the top of the height-adjust stool cylinder and press the seat assembly down firmly. Sit on the seat to completely drive the components together. Failure to do so could result in personal injury.

